


■ SAC551B-CK B/W


■ SAC551C-CK Color

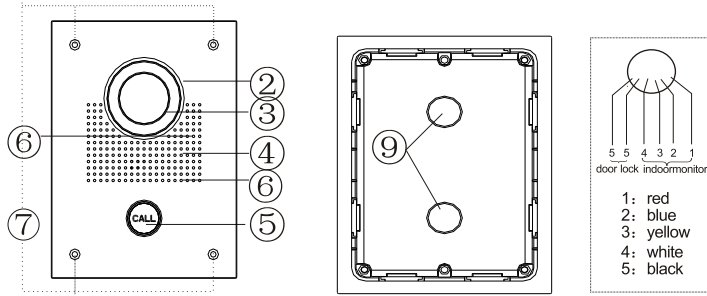

Dimension: 203X150X43(mm)

■ SAC561B-CK B/W


■ SAC561C-CK Color

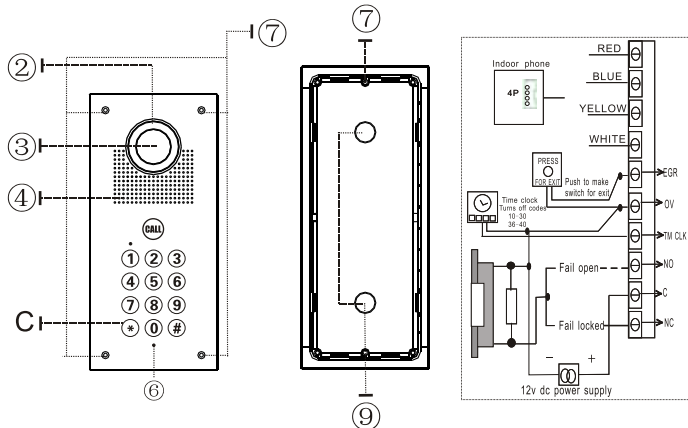

Dimension: 250x120x43(mm)

■ SAC50B-CK B/W

■ SAC50C-CK Color

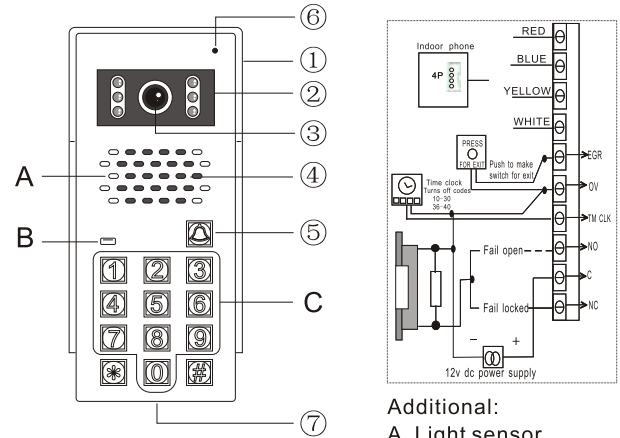

Dimension: 78X185X60(mm)


NO.	NAME	DESCRIPTION
①	Water Cover	Protect the camera from outside water
②	LED Assistant	Provide lighting during night time for better visibility.
③	CCD Camera	Capture the image to sent to the monitor
④	Speaker	Sound from the monitor is delivered
⑤	Calling Button	Call the indoor phone to communicate
⑥	Microphone	Delivers and sound voice when communication with the indoor phone
⑦	Screw Hole	Install the screws
⑧	Nameplate	Show residential name
⑨	Connection wiring	Connection with the monitor

Specification



Power	DC 14.5V
Electric current	Working ≤ 200mA
Camera lens	1/3 CCD 72 degree ken
Illumination	0.05LUX
Communication duration	120s
Communication method	Duplex communication type
Working Temperature	-20-55℃
IP rating	55

Specifications of 50/561 series code access

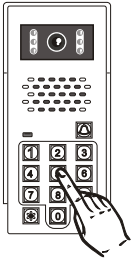

ATTENTION

- 1: Input A 4 Digit Password To Have The Door Striked Or The Lock Unlocked.
- 2: The Original Factory Defaulted Password Is *1234.

Change the master code

- 1: Shut off the power of the unit and keep pressing the button *
- 2: switch on the power pressing the button * down, the unit will then give a long continuous tone.
- 3: when the tone stopped, Another sound will be heard and input your new 4 digit programmers code.

Entering programming mode

- 1: press the button * plus your 4 digit master code.
- 2: you are successfully enter into the programming mode when three sound is heard and the LED is flashing
- 3: press the button * to exit programming mode.

Adding user codes

- 1: Enter into the programming mode interface.
- 2: it is available for 40 groups code. 01 to 40 is the group number, which should be input in front of the 4 digit code. from 31 to 40 group codes, input once 4 digit code to open the door for a long time until twice input the same code to have it closed.
- 3: input 4 digit code, a two sound is heard, it is unsuccessful and indicating the code is existent at somewhere; if a three sound is heard, it is successfully set.
- 4: press the button * to exit.

Delete user codes

- 1) enter into the programming mode.
- 2) Enter one of the code group from 01 to 40
- 3) press the button # to delete the code of this group
- 4) it is successfully deleted when a three sound heard. press the button * to exit.

Delete a codes directly

- 1) enter into the programming mode.
- 2) press the button # to hear a two sound.
- 3) input 4 digit code that wanted to deleted
- 4) it is successfully deleted when a three sound heard. press the button * to exit.

Delete all codes

- 1) enter programming mode .
- 2) press the button # to hear a two sound.
- 3) one more press the button # to hear another two sound.
- 4) continuously press the button # at 7 times to have the system deleted all setting. Unlocking time change to be second while original code won't be changed. The system will resume after a five sound heard.

Set the locking time

Factory set is 05 second.

- 1) enter programming mode .
- 2) Enter 00 (this is a special code group)
- 3) enter a desired lock/delay operation time in a two digit format (01 to 99 seconds)
- 4) press the button * to exit.