 


Specifications of 591 series code access



⚠ ATTENTION

1. The original factory default password is 1234.
2. In the programming mode, set 40 groups of 4-digit passwords to unlock door.

— Modify the programming password —

1. Switch off the power, press * button and hold, switch on the power. After a lasting sound Di... is heard, release * button.
2. The lasting sound stops, then enter 4 digits (can be set as 2-6 digits) new programming password (the length same as original code), another long Di sound is heard, it indicates modifying success.
3. Press * to exit the programming mode.

— Enter to the programming mode —

1. Press *, a Di sound is heard, enter the 4 digits (can be set as 2-6 digits) programming password, a long Di sound can be heard, it indicates entered the programming mode successfully.
2. Within 30 seconds without any operations it will exit the programming mode, or press * to exit.

— Set unlock time —

- Factory default setting is 1 second.
1. Enter to the programming mode first.
 2. Press 00, a long Di sound is heard, enter 2 digits (from 01-99) as the unlock time, another long Di sound can be heard, it indicates setting success.
 3. Press * to exit the programming mode.

Add user passwords

1. Enter to the programming mode first.
2. Enter 2 digits(from 01-40), a long Di sound is heard, press 4 digits (can be 2-6 digits)password, another long Di sound can be heard, it indicates adding success.
3. Press * to exit the programming mode.

Delete user passwords

1. Enter to the programming mode first.
2. Enter 2 digits(from 01-40), a long Di sound is heard, press # to confirm, another long Di sound can be heard, it indicates deleting success.
3. Press * to exit the programming mode.

Delete user passwords directly

1. Enter to the programming mode first.
2. Press#, when DiDi sound is heard, enter that 4 digits(can be set as 2-6 digits) password you want to delete, a long Di sound can be heard, it indicates deleting success.
3. Press * to exit the programming mode.

Setting the length of password

1. Enter to the programming mode first.
2. Press 99, a long Di sound is heard, then enter 2-6 digits, another long Di sound can be heard, it indicates setting success.
3. Press * to exit the programming mode.

Delete all settings

1. Enter to the programming mode first.
2. Press #, when a DiDi sound is heard, press # again, a long Di sound can be heard, then press # for 7 times, after 3 seconds, another long Di sound will be heard, it indicates deleting success(The unlock time changes to 1 second and the programming password does not change).
3. Press * to exit the programming mode.

Restore factory mode

Switch off the power, press # and hold, switch on the power. After a long Di sound is heard, then release #, restoring success. (the system restore factory programming password 1234 and clear out all the set passwords)