

Operation and Installation Guide

USER MANUAL

A2-D0106TM  
A2-D0106TM-G

SAFETY INSTRUCTION

1.Install the equipment in such way that the mains supply plug or the connector of the equipment can be easily reached.  
2.Do not place the equipment where water can drip or splash onto it.  
3.Do not place sources of heat, such as ovens, furnaces, or burning candles, etc., and sources of magnetic fields, such as TVs, microwaves, etc.  
4.Do not block the ventilation slots of the equipment. When installing the equipment, leave some free space around it to provide adequate ventilation.  
5.Do not clean the equipment with spray cleaners or solvents. Unplug the power supply before clean.

CAUTION

6.Do not disassemble the equipment freely. Mishandling, alternations or modifications not approved by the professional technician will void the warranty.

GENERAL FEATURES

7.This Video Door Phone System offers you complete control over the access of visitors to your house, in addition, it allows you to identify the person who calls and provides convenient operation to active the communicate.

1

OUTDOOR STATION

NO.	NAME	DESCRIPTION
①	LED Assistant	Provide lighting during night time for better visibility
②	Camera	Capture the image to sent to the monitor
③	Speaker	Sound from the monitor is delivered
④	Calling Button	Call the indoor phone to communicate
⑤	Microphone	Delivers sound voice when communcation with the indoor phone
⑥	Screw Hole	Install the screws
⑦	Nameplate	Show residential name
⑧	Connection wiring	Connection with the monitor
⑨	Card Reading Area	

Specification

Power	DC 17 V
Electric current	Working≤200mA
Camera lens	1/4 ,72° /110°
Definition	700TVL
Illumination	0.05LUX
Talking duration	120s
Working Temperature	-20 ~ +55° C
IP rating	55

■ A2-D0106TM /A2-D0106TM-G

Dimension:250X120X48(mm)

A1: Indoor monitor  
A2: Indoor monitor  
A3: Electric lock of outdoor station  
A4: Electric lock of outdoor station

3

OPERATION OF OUTDOOR STATION

1.This unit's relay can be programmed for opening the lock, up to 1000 correlative codes can be stored into.  
2.Default administration code is 1234.  
3.Input the admin default code twice(1234+1234).But  
a. If the admin default code you set is two digits, please input 12 12  
b. If the admin default code you set is three digits, please input 123 123  
c. If the admin default code you set is five digits, please input 1234512345  
The rest is be deduced by analogy.....The admin codes is max 6 digits.  
After you enter in the setting mode, the Red LED will be on.

ACCESS MODE SETTING

In the setting mode:  
Press the button ④ and ② , the mode indicator will flash red, follow the button ② and ⑦ , the mode indicator will turn red, a long beep will be heard, it indicates that either the card or code access is available.

SET THE LENGTH OF ADMINISTRATION PASSWORD

In the setting mode:  
Press the button ④ and ⑦ red indicator will be flashing, then press the button ② and ④ a sound "BI" as reminder, then input X(X=2,3,4,5,6):  
2--Stands for the password/code digit length is 2 (00-99)  
3--Stands for the password/code digit length is 3(000-999)  
The rest is deduced by analogy, and the maximum is 6 .  
You will hear long beep, then comes with 7 beeps meaning digit length set successfully.

Press the button ② to quit setting mode.

4

SET THE UNLOCKING TIME

Press the button ④ and ⑦ , the mode indicator will flash red, enter the delay time (any 2-digit from 00 to 99, e.g. 05 means the unlocking time is 5 seconds delay). then the mode indicate light will turn red, in the mean time a long beep will be heard indicating successful delay time setting.

If set the unlock delay time as 00, it means that when swipe card or input the unlock password once to open the door, again to close the door.

Press the button ② to quit the setting mode.

MODIFY ADMINISTRATION PASSWORD

Enter in the setting mode, then the indicator will be red;  
Press the button ④ and ⑦ , the red indicator will be flashing, then input a new ADMINISTRATION password twice (the length of the new ADMIN. password must be the same as the old one) and a "BI" refers to a successful modification.

Press the button ② to quit the setting mode.

MODIFY THE USER PASSWORD

Enter in the setting mode, then the indicator will be red;  
Press the button ④ and ② , the red indicator flashes, then press the button ② and ④ , a beep as a reminder. Then input the serial number (3-digit from 000 to 999),and enter the correlative passwords (the length should be the same as ADMIN. password).

Press the button ② to quit the setting mode.

5

■ A2-D0106TM /A2-D0106TM-G INSTALLATION DIAGRAM SKETCH

6