

Operation and Installation Guide

USER MANUAL

A4-D0106TM
A4-D0106TM-G
A4-D0106TM Series

SAFETY INSTRUCTION

- Install the equipment in such way that the mains supply plug or the connector of the equipment can be easily reached.
- Do not place the equipment where water can drip or splash onto it.
- Do not place sources of heat, such as ovens, furnaces, or burning candles, etc., and sources of magnetic fields, such as TVs, microwaves, etc.
- Do not block the ventilation slots of the equipment. When installing the equipment, leave some free space around it to provide adequate ventilation.
- Do not clean the equipment with spray cleaners or solvents. Unplug the power supply before clean.

CAUTION

Do not disassemble the equipment freely. Mishandling, alternations or modifications not approved by the professional technician will void the warranty.

GENERAL FEATURES

This Video Door Phone System offers you complete control over the access of visitors to your house, in addition, it allows you to identify the person who calls and provides convenient operation to active the communicate.



OUTDOOR STATION

NO.	NAME	DESCRIPTION
①	LED Assistant	Provide lighting during night time for better visibility
②	Camera	Capture the image to sent to the monitor
③	Speaker	Sound from the monitor is delivered
④	Calling Button	Call the indoor phone to communicate
⑤	Microphone	Delivers sound when communcation with the indoor monitor
⑥	Screw Hole	Install the screws
⑦	Nameplate	Show residential name
⑧	Connection wiring	Connection with the monitor

Specification

Power	DC 14.3V/ 15V
Electric current	Working≤200mA
Camera lens	1/4 ,72° /110°
Definition	700TVL
Illumination	0.05LUX
Talking duration	120s
Working Temperature	-20 ~ +55° C
IP rating	55

A4-D0106TM/A4-D0106TM-G

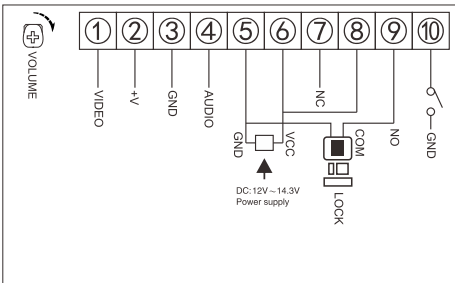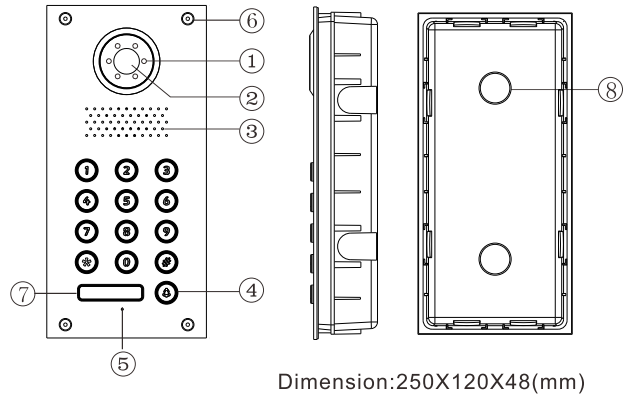

OPERATION OF OUTDOOR STATION

- 1.This unit's relay can be programmed for opening the lock, up to 1000 correlative codes can be stored into.
- 2.Default administration code is 1234.
- 3.Input the admin default code twice(1234+1234).But
 - a. If the admin default code you set is two digits, please input 12 12
 - b. If the admin default code you set is three digits, please input 123 123
 - c. If the admin default code you set is five digits, please input 1234512345The rest is be deduced by analogy.....The admin codes is max 6 digits. After you enter in the setting mode, the Red LED will be on.

ACCESS MODE SETTING

In the setting mode:
Press the button **2** and **0** , the mode indicator will flash red, follow the button **0** and **1** , the mode indicator will turn red, a long beep will be heard, it indicates code access is available.

SET THE LENGTH OF ADMINISTRATION PASSWORD

In the setting mode:
Press the button **2** and **9** red indicator will be flashing, then press the button **0** and **4** a sound "BI" as reminder, then input X(X=2,3,4,5,6):
2--Stands for the password digit length is 2 (00-99)
3--Stands for the password digit length is 3(000-999)
The rest is deduced by analogy, and the maximum is 6 .
You will hear long beep, then comes with 7 beeps meaning digit length set successfully.

Press the button **2** to quit setting mode.

ADD THE PASSWORD

Enter in the setting mode, then the indicator will be red:
Then input a 3-digit from 000 to 999, this is the serial number set for each password.

ADD PASSWORDS STEPS:

- Enter in setting mode, and the yellow LED indicator will be flashing.
- Input three-figure from 000 to 999 data storage units, and the green LED light is on, meanwhile, yellow LED indicator is flashing.

- Input the correlative passwords. The length of passwords should be the same as admin code. For example, the admin code is 12 (two is the length), herein should setting two digits passwords, you can set 00-99 as your passwords. If the admin code is 123(three is the length), herein should setting three digits passwords, you can set 000-999 as your passwords. The rest may be deduced by analogy... After the sound "BI", means the passwords setting successfully.

Press the button **2** to quit setting mode.

NOTE: If indicator flashes red light, meaning this serial number has already been exist, press the button **2** twice to clean up; If indicator turns on green light, and you can see the red indicator flashes in the mean time, showing that this serial No. can be applied now.

Importance: It is better to have a mark or a record for each password. so that it is more convenient for you to delete password you don't need.

DELETE THE PASSWORD

Enter in the setting mode, then the indicator will be red;
Input the 3-digit serial No. of the password which you want to delete.
If the red indicator light flashes, meaning this data does exist, then you can press **2** the button twice to delete this password .

CLEAN ALL USER PASSWORD, RESET TO FACTORY DEFAULTS

When in the setting mode, then the indicator will be red;
Press the button **2** and **0** (mode indicator flashes red), then press the button **2** twice, a continuous beep will be heard and red indicator will turn on), now all the user password have been cleaned out successfully.
Press the button **2** and **0** (mode indicator flashes red), then press the button **2** twice, a continuous beep will be heard and red indicator will turn on), now it goes to factory defaults.
Press the button **2** to quit the setting mode and standby.

If enter wrong information, it will imply as "BI. BI." sounds. The device would turn back without actions in 30 seconds automatically accompany with "BI. BI" sounds. If it is not in the setting mode and press incomplete numbers, and if unlock door by password but only one action is done, then it will turn back in 5s automatically accompany with "BI. BI" sounds.

If you forget the admin password, press the button **2** and hold on, then power on. A "BI" sound as reminder, meaning ADMIN. Password default setting successfully.

SET THE UNLOCKING TIME

Press the button **2** and **1** , the mode indicator will flash red, enter the delay time (any 2-digit from 00 to 99, e.g. 05 means the unlocking time is 5 seconds delay). then the mode indicator light will turn red, in the mean time a long beep will be heard indicating successful delay time setting.

If set the unlock delay time as 00, it means that when input the unlock password once to open the door.

Press the button **2** to quit the setting mode.

MODIFY ADMINISTRATION PASSWORD

Enter in the setting mode, then the indicator will be red;
Press the button **2** and **3** , the red indicator will be flashing, then input a new ADMINISTRATION password twice (the length of the new ADMIN. password must be the same as the old one) and a "BI" indicating a successful modification.

Press the button **2** to quit the setting mode.

MODIFY THE USER PASSWORD

Enter in the setting mode, then the indicator will be red;
Press the button **2** and **2** , the red indicator flashes, then press the button **0** and **2** , a beep as a reminder. Then input the serial number (3-digit from 000 to 999), and enter the correlative passwords (the length should be the same as ADMIN. password).

Press the button **2** to quit the setting mode.

A4-D0106TM/A4-D0106TM-G INSTALLATION DIAGRAM SKETCH

