

Operation

enter setting mode

press the * key plus # and then XXXX (system code) +#, a tone D- will be heard, enter the setting mode, press the * key to return the setting mode(it will be returned automatically without any operation within 20s),the primary code is 4567.

master card setting

At first enter the setting mode, and then press the key 0 ,and a tone D- will be heard, and then press the key 7, the same tone D- again sound, either continue input the last 6 digital number of master card(you can find it at the backside) or you can also have this master card to close the sense area, a tone will be heard , master card has been successfully set.

Add user card

At first enter the setting mode, and then press the key 1 , a tone will be heard ,enter the addition mode: input the last 6 digital card number, a tone D- will be heard, finished adding, or have the user card to close the sense area, a tone D- will be heard ,finished adding, add other user card one by one in this method , four tones will be heard by the card which have been added, press the * key to return the setting mode, press again the * key to standby mode.(it will be exit automatically without any operation within 20s)
add the user card by the master card: in standby, have the master card to close the sense area. a tone will be heard ,enter addition mode: have the new user card sensed, and then twice tone will be heard. this user card successfully set, set other cards one by one. At last have the master card sensed, the program will be exit.

Deleted the user card

At first enter the setting mode, and then press the key 2 , a tone D- will be heard , enter the deletion mode: input the last 6 digital number of the card you want to delete, a tone D- will be heard , it show that this card has been deleted, or you can also have this user card to close the sense area, a tone D- will be heard , finished deleting. in this way Delete all user one by one. press the * key to return the setting mode, press again the* key to standby mode. (it will be exit automatically without any operation within 20s)

Deleted all user card

At first enter the setting mode, press the key 9 , a tone will be heard . press the key 9 again D...the continual tones will be heard . after all tones stop, all user cards have been deleted. press the * key to return standby mode(it will be exit automatically without any operation within 20s)

Unlock time delay

At first enter the setting mode, press the key 4, a tone D- will be heard ,press the 2 digital number(such as 01-99),press the * key to return the setting mode. press it again to exit. (it will be exit automatically without any operation within 20s)