 


## Specifications of 591 series code access



### **⚠ ATTENTION**

1. The original factory default password is 1234.
2. In the programming mode, set 40 groups of 4-digit passwords to unlock door.

### **Modify the programming password**

1. Switch off the power, press \* button and hold, switch on the power. After a lasting sound Di... is heard, release \* button.
2. The lasting sound stops, then enter 4 digits (can be set as 2-6 digits) new programming password (the length same as original code), another long Di sound is heard, it indicates modifying success.
3. Press \* to exit the programming mode.

### **Enter to the programming mode**

1. Press \*, a Di sound is heard, enter the 4 digits (can be set as 2-6 digits) programming password, a long Di sound can be heard, it indicates entered the programming mode successfully.
2. Within 30 seconds without any operations it will exit the programming mode, or press \* to exit.

### **Set unlock time**

Factory default setting is 1 second.

1. Enter to the programming mode first.
2. Press 00, a long Di sound is heard, enter 2 digits (from 01-99) as the unlock time, another long Di sound can be heard, it indicates setting success.
3. Press \* to exit the programming mode.

---

### **Add user passwords**

1. Enter to the programming mode first.
2. Enter 2 digits(from 01-40), a long Di sound is heard, press 4 digits (can be 2-6 digits)password, another long Di sound can be heard, it indicates adding success.
3. Press \* to exit the programming mode.

### **Delete user passwords**

1. Enter to the programming mode first.
2. Enter 2 digits(from 01-40), a long Di sound is heard, press # to confirm, another long Di sound can be heard, it indicates deleting success.
3. Press \* to exit the programming mode.

### **Delete user passwords directly**

1. Enter to the programming mode first.
2. Press#, when DiDi sound is heard, enter that 4 digits(can be set as 2-6 digits) password you want to delete, a long Di sound can be heard, it indicates deleting success.
3. Press \* to exit the programming mode.

### **Setting the length of password**

1. Enter to the programming mode first.
2. Press 99, a long Di sound is heard, then enter 2-6 digits, another long Di sound can be heard, it indicates setting success.
3. Press \* to exit the programming mode.

---

### **Delete all settings**

1. Enter to the programming mode first.
2. Press #, when a DiDi sound is heard, press # again, a long Di sound can be heard, then press # for 7 times, after 3 seconds, another long Di sound will be heard, it indicates deleting success(The unlock time changes to 1 second and the programming password does not change).
3. Press \* to exit the programming mode.

### **Restore factory mode**

Switch off the power, press # and hold, switch on the power. After a long Di sound is heard, then release #, restoring success. (the system restore factory programming password 1234 and clear out all the set passwords)